



CUT HOLE IN TOP

1 Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



CUT HOLE IN BOTTOM

2 Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".



INSTALL OUTLET

3 Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.



SECURE SCREWS

4 Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.

**NOTE: Max Torque Force when tightening nuts, is;  
7.0 Kgf.cm = 6.0 lbf.In**

A Furniture Power Distribution Unit is not for permanent installation as part of the building structure and not for mounting in a permanently-installed furnishing such as a fixed countertop.



# M-POWER-2T-RNDBB


Distributed by



Mormax Company, Inc.  
8 Westchester Plaza  
Elmsford, NY 10523

914-699-0101  
sales@mormax.com  
mormax.com

**TOP  
TEMPLATE**

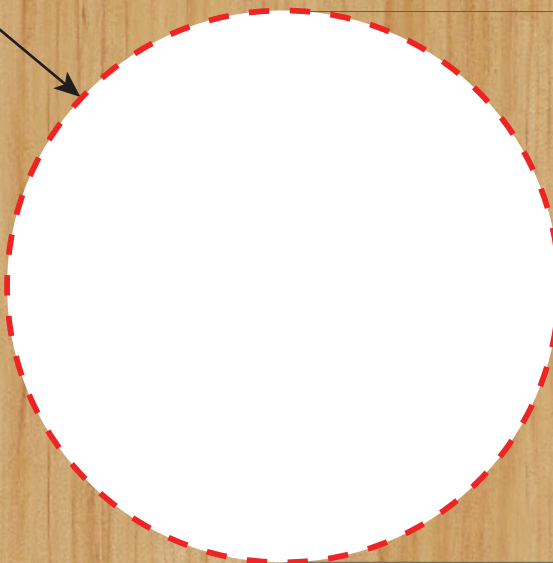

2.874" (73.000mm)






# M-POWER-2T-RNDBBB

Distributed by



Mormax Company, Inc.  
8 Westchester Plaza  
Elmsford, NY 10523

914-699-0101  
sales@mormax.com  
mormax.com

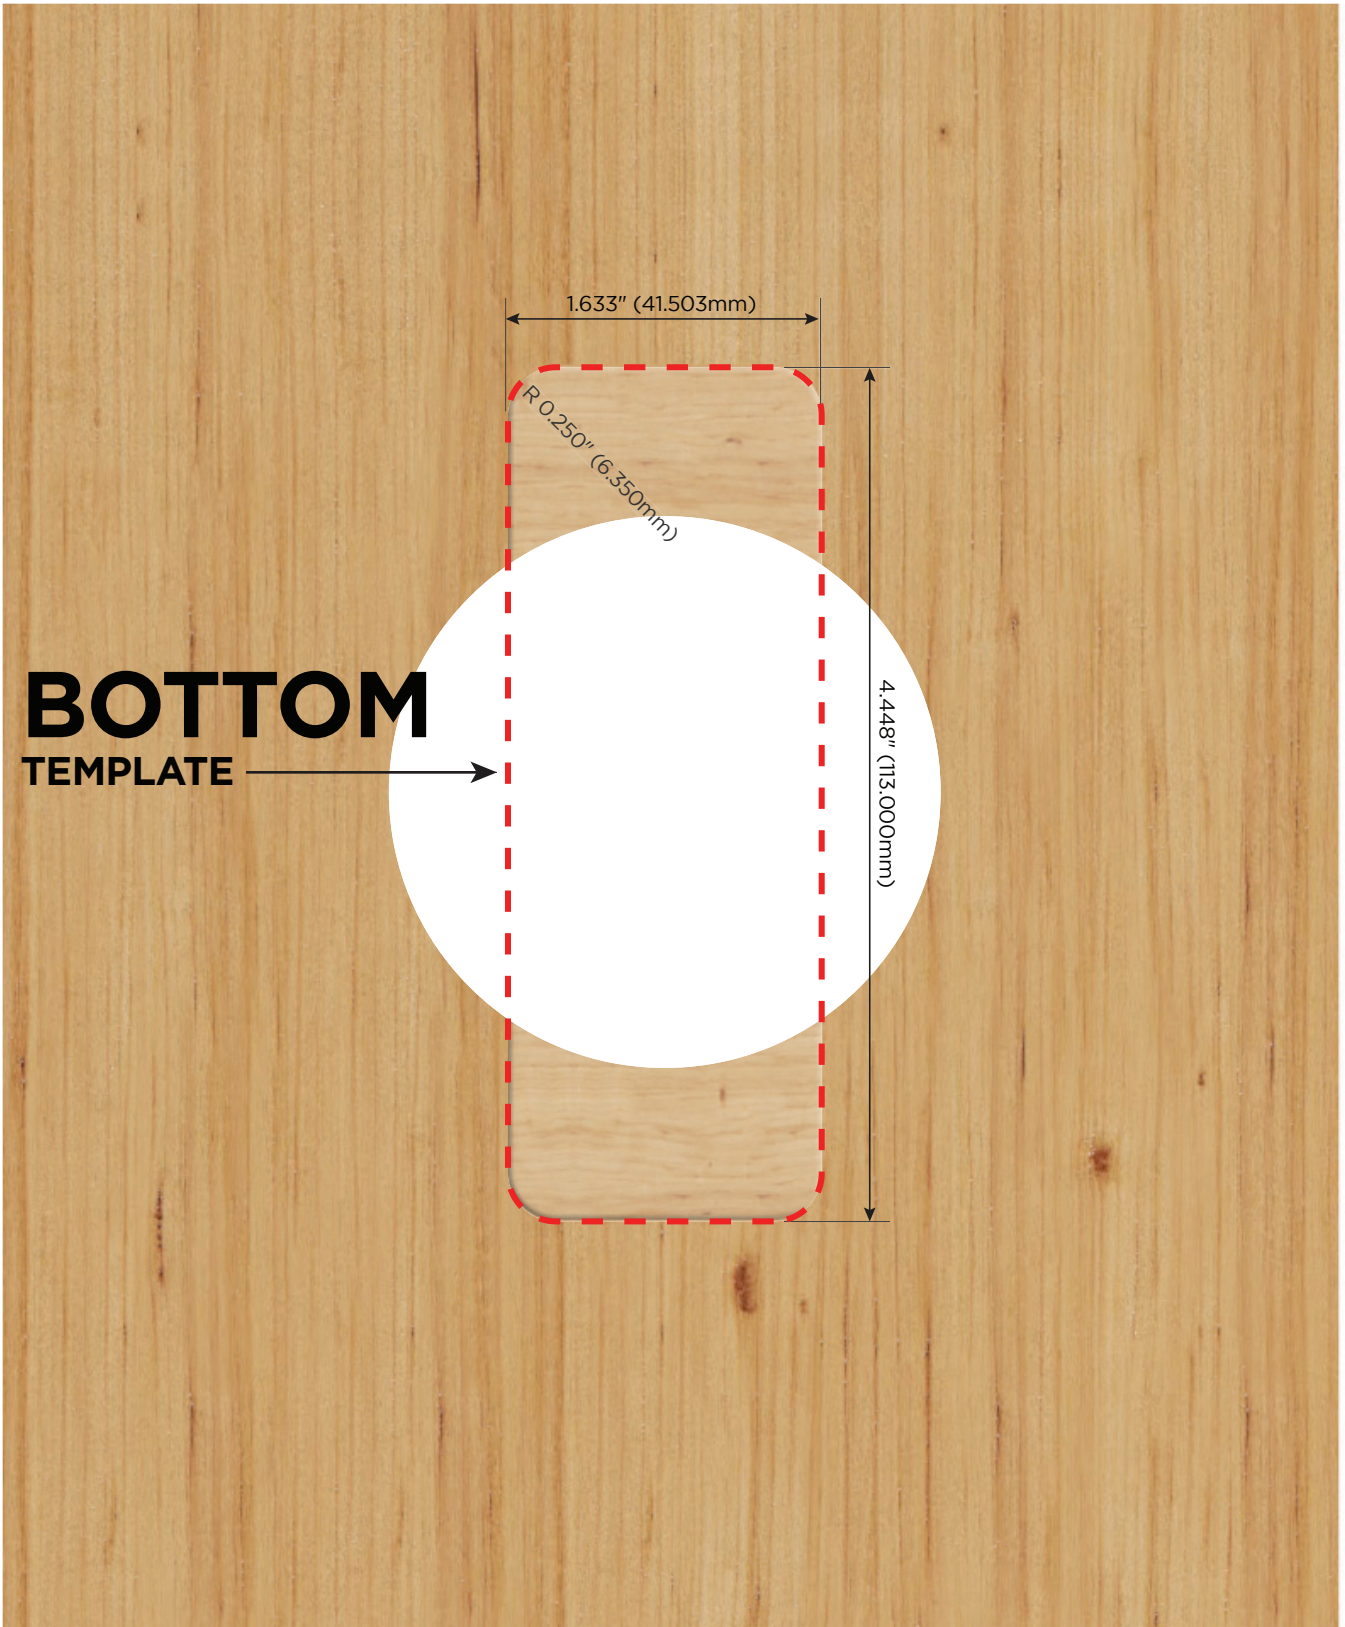



# M-POWER-2T-RNDBBB

Distributed by



Mormax Company, Inc.  
8 Westchester Plaza  
Elmsford, NY 10523

914-699-0101  
sales@mormax.com  
mormax.com

