


loc-n-go

Installation Guide



1 Measure and position where the loc-n-go and strike plate will be installed.

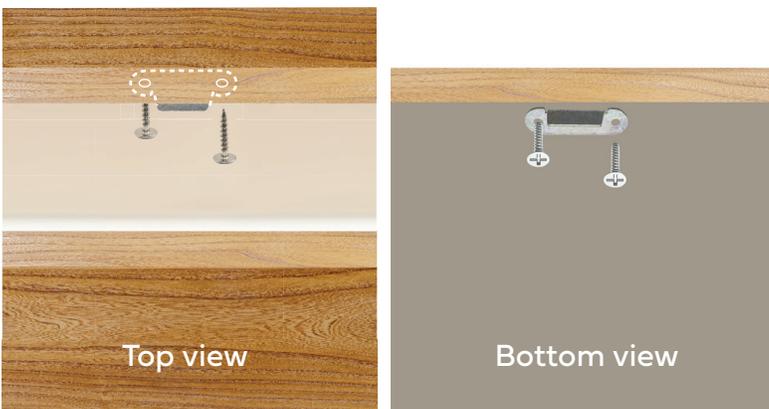

2 Install the strike plate under the top panel as indicated in the left illustration.



3 Cut mounting holes for loc-n-go as indicated on template labeled "mounting template (1:1)" on page 3.



4 Insert loc-n-go into the place.



5 Put in washers, mounting screws, locking latch, and then tighten them using the phillips screwdriver.



6 Check to ensure the locking latch is catching the strike plate when it's locked.

