




M-POWER-2T

FLIP-UP INSTALL GUIDE

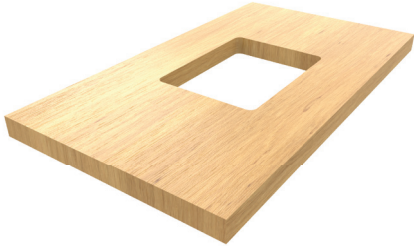

CUT HOLE IN WOOD

- 1 Rout/cut bottom of wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".



INSTALL FLIP-UP

- 2 Insert Flip-Up from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the Flip-Up in place.



M-POWER-2T

FLIP-UP INSTALL GUIDE



ROUTING
TEMPLATE



M-POWER-2T

FLIP-UP INSTALL GUIDE

